

BAR

USING THE GLASSWASHER

Before using glasswasher

- Check that the glasswasher has sufficient chemicals for the session
 - o These are located under the front cover of the machine.



- Ensure that the inner trays have been cleaned and replaced.
- Switch glasswasher on at the main wall and press the square power button on the front of the machine.



Using the machine

- You need to wait until the dishwasher has reached the correct temperature before using – front button will be green.
- Load the glasswasher tray and rinse heavily stained glassware before putting it in the machine
- Shut the glasswasher door and press the square button this will then go blue after the cycle is complete



End of session

- Empty the machine and drain the glass washer by pressing the drain button on the front of the machine
- Remove the inner trays and clean.
- Switch off at the main wall.

