

# BISTRO

## OPERATING THE DISHWASHER

### Before using the dishwasher:

- Check that the dishwasher has sufficient chemicals for the session.
- Ensure that the food trap basket & water jets have been cleaned and inner parts have been replaced.
- Switch dishwasher on at the main wall and press the power switch on the front of the machine, this should be red whilst heating up.



### Using the machine

- You need to wait until the dishwasher has reached the correct temperature before using – the square button will turn green when ready.
- Load the dishwasher tray and rinse dirty dishes before putting it in the machine.
- Pull down the dishwasher shutter and press the big square button this will then go blue during the cycle after the cycle is complete it will then flash green.



### End of session

- Empty the machine and Drain dishwasher pressing the drain button on the front of the machine
- Remove the water jets, food basket and metal plug from the machine and clean.
- Switch off at the main wall.

